 
ZV22 ZV3/4 ZV1/2

2-port Zone Valve

INSTRUCTION SHEET



The fitting and wiring instructions should be read before fitting the valve

Fitting:

When connecting to pipe work do not use the actuator for leverage. Valves should be held by wrench flats on body. Place the AUTO/MAN lever in the MAN position when filling, venting or draining the system

The valve must be installed with the arrow in the direction of the flow. Failure to do so will result in water hammer and potential premature failure

Mounting Options:

The valve may be mounted vertically, or horizontally but should not be mounted so that valve head is below the horizontal level of the pipe work Do NOT over tighten

Warning:

All controls must be earthed. All valves should have a means of disconnection from electrical mains supply which incorporates a contact separation of at least 3mm in all poles. All wiring must be carried out to IEE Regulations by a competent Electrician The system must be appropriately fused.

Technical Data

Voltage: 230Vac / 110Vac / 24Vac
Power consumption: 6W
Cable length: 1 metre, 5 core
Fluid temperature: +5 to +80°C
Max ambient temperature: +50°C
Port A is normally closed when there is no power

Wires

Blue – neutral, Brown – live Green & Yellow – earth Orange – end switch out (auxiliary) Grey – end switch in (auxiliary)

Certifications

CE : CI02410 ISO 9001:2000 GB00568



 
Type Numbers and sizes:

ZV22 22mm compression ZV28 28mm compression

ZV1/2 1/2" BSP

ZV3/4 ¾" BSP (3/4" compression upon request)
ZV1 1" BSP (1" compression upon request)

All dimensions in mm



ZV22	A = 87	B = 55	C = 60	D = 112
ZV28	A = 87	B = 55	C = 60	D = 117
ZV3/4	A = 87	B = 55	C = 60	D = 94
ZV1	A = 87	B = 55	C = 60	D = 94

Application

The **ZV** range 2-port spring return valve has been designed in general to be used in commercial, industrial applications and on central heating systems which when correctly wired with an appropriate room thermostat, cylinder thermostat and programmer will control the water flow from the boiler to hot water and from boiler to central heating

Replacement Head

When replacing the head, ensure that the Auto/Manual lever on both the installed and replacement heads is in the manual position